
ZEISS X-Ray Series


Make the Invisible Visible






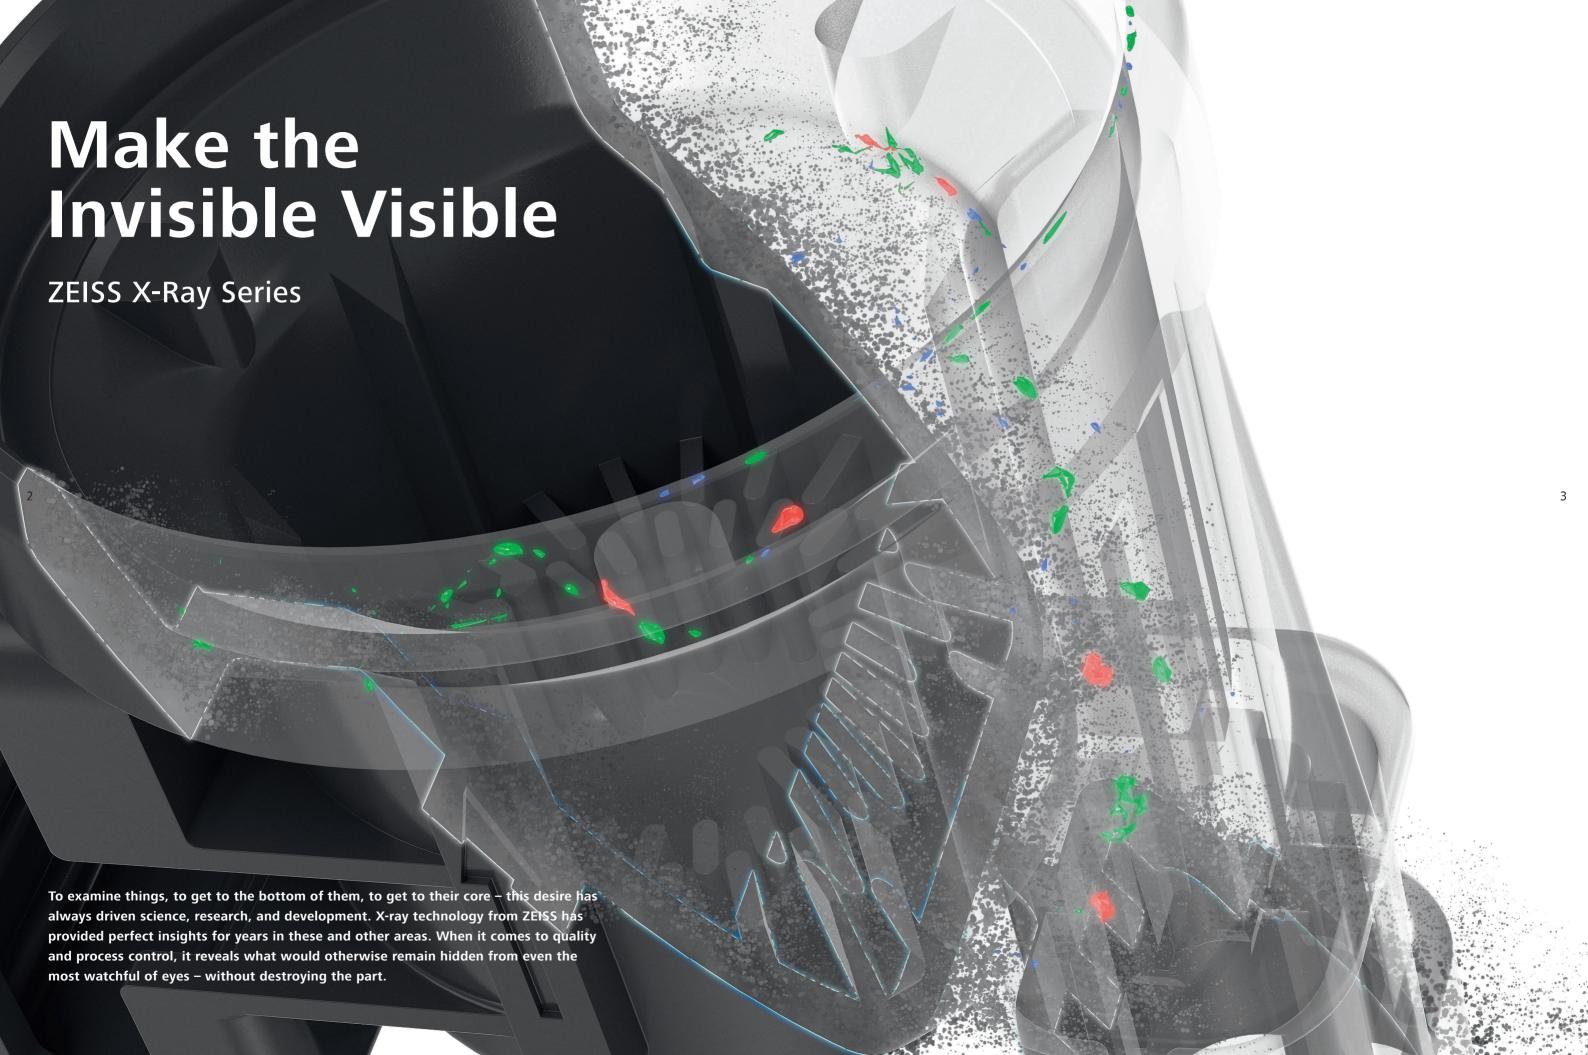

Only one is perfect inside.

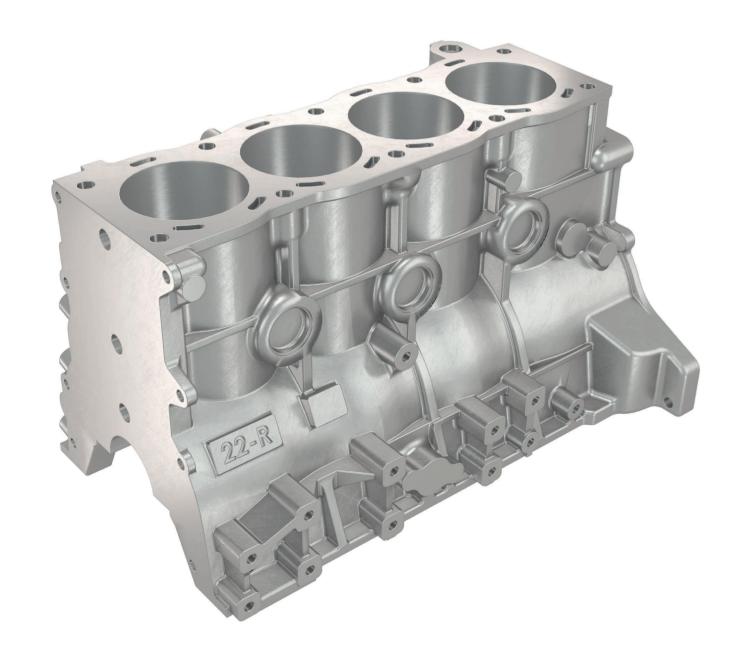


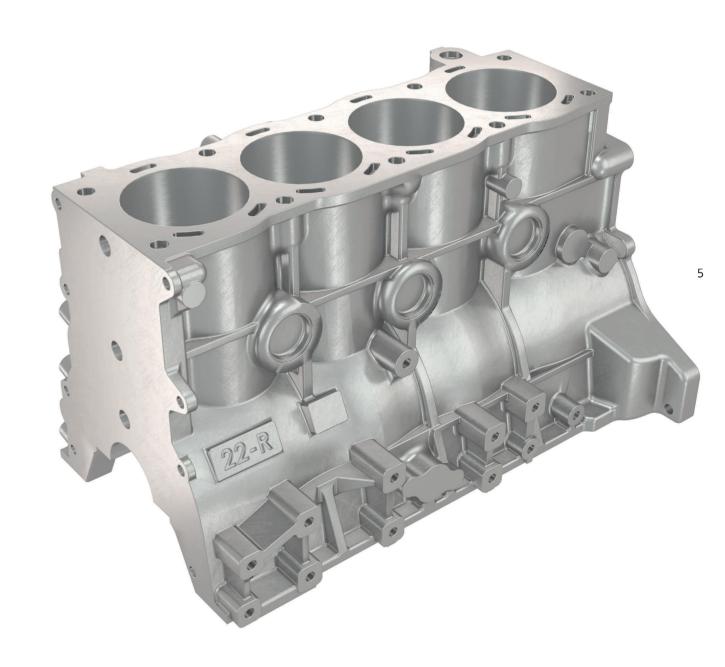


Don't guess. X-ray it. ZEISS X-Ray Series. Make the Invisible Visible.

ZEISS X-Ray Series solves the mystery

Once hidden, but now visible – thanks to X-ray solutions from ZEISS. It is the only way to discover which of the two parts is flawless.

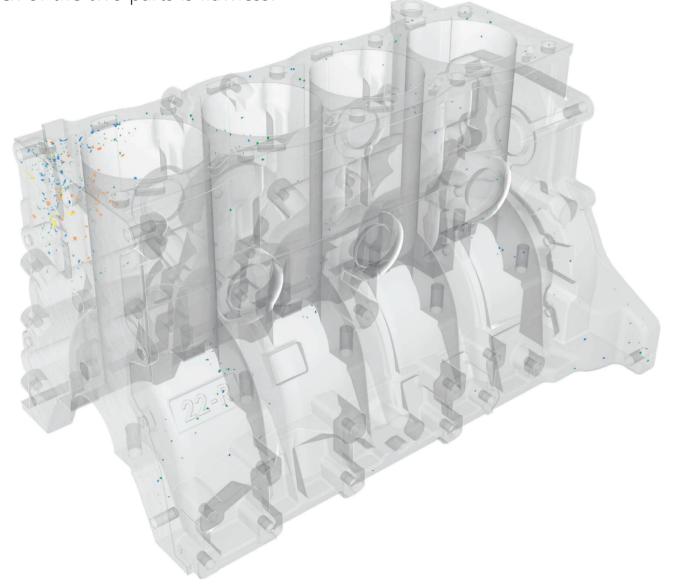

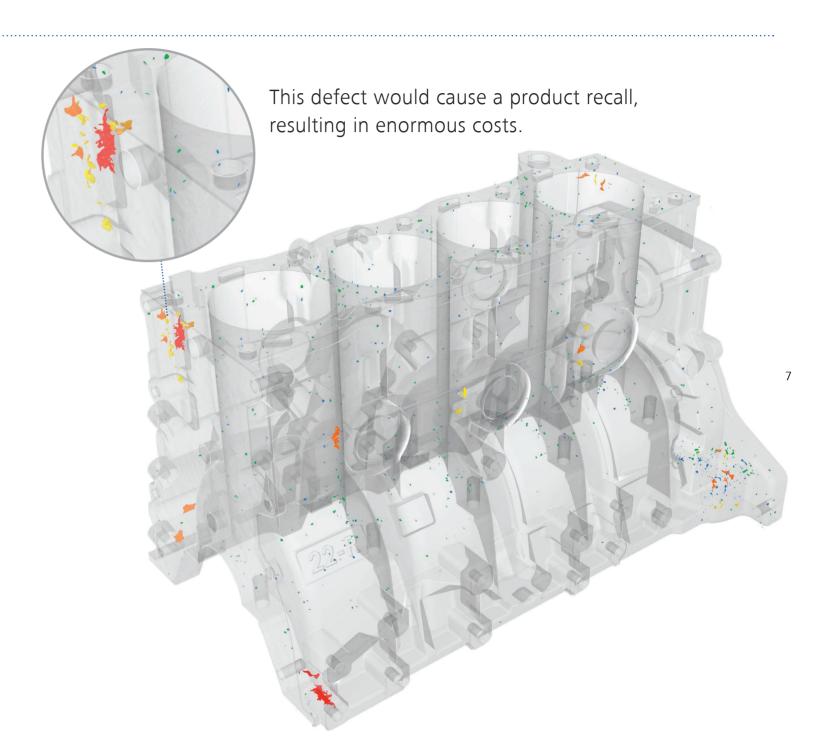

Can you really take the risk?

X-ray solutions from ZEISS perform advanced, non-destructive quality control. Make the invisible visible – and be absolutely sure about the quality of your parts.

Reveal the hidden secrets of your part

X-ray technology provides completely new insights into the invisible. You can capture, analyze, measure, and inspect internal structures quickly and non-destructively. Warpage All of the parts are finished, but they do not fit together, because they are warped? It is better to measure the internal and external structures during production and intervene early in the manufacturing process. This cuts costs. Pores may form if the temperature is not ideal during casting. Depending on the size, position, and number of air inclusions, this defect weakens the material and may cause functional impairments **Cavities** Vacuum build-up during the cooling process can greatly reduce the quality of the part. If cavities are not detected, this may lead to cracks in the parts Inclusions under load. Inclusions of slag, oxides, sand, steel or tungsten can be a problem during further processing or cause cracks.

Residuals


Grit in the gears? This will not happen to you, if you examine your parts with X-ray technology. Residuals such as sand from casting molds or metal powder for 3D printing can be detected quickly and easily in just one scan.

.....

What was initially just a small crack can develop into a major problem under stress. Cracks in the material can have an enormous effect on the stability of the part. This can become a risk, especially with safety-relevant components.

Technology with benefits

It is self-evident that X-ray technology makes hidden things visible. However, the fact that this opens up completely new possibilities in quality assurance and results in significant added value for the customer is less well-known. Let us explain this to you!

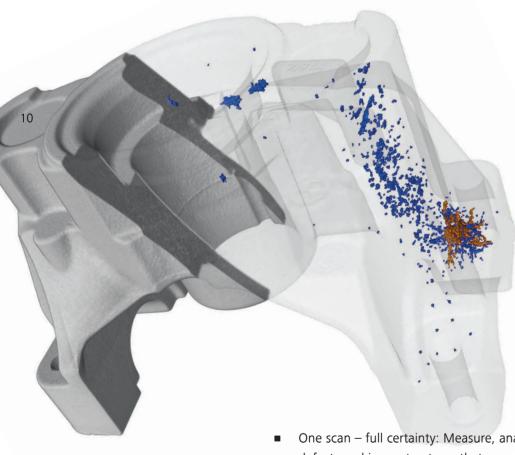

- One scan full certainty: Measure, analyze, and inspect hidden defects and inner structures that cannot be detected with coordinate measuring machines.
- Thanks to X-ray, you can cut parts non-destructively and look inside!
- No more complex fixturing. This saves time and money!
- By scanning all internal and external structures with computed tomography systems (CT), parts can be reproduced even if no CAD model is available.

An investment that pays off

Amortized after 12 months

A thorough inspection right after the casting process is important when producing aluminum castings. Companies face high costs if defects are not detected until later in production. This is why investing in an automated inline solution for quality assurance pays off in less than 12 months.



time savings

30 to 70%



Producing tools and molds is very costly, because it usually requires several iteration loops until tools are optimally adjusted and molds are perfectly formed. This process can be improved and shortened by 30-70% by capturing all structures in a 3D model with CT and the software ZEISS REVERSE ENGINEERING (ZRE). In this way, costs of tools can be significantly reduced.




Reduce setup times by up to

Setup time is lost time – which is why it is so important to reduce the time between scans. The setup table ZEISS FixAssist® CT will help you maximize the use of your CT and make your quality assurance processes more efficient. This accessory can reduce setup times by up to 80%. Even better: Your investment will pay for itself in less than four months!


Take a close look at every detail

METROLOGY




Nominal/actual comparison

Deviations from the CAD model or
master part are visualized in
a false color comparison.




Dimensional control

Thanks to computed tomography,
the dimensional accuracy of complex
internal and external features can be
checked in just one scan.




Wall thickness analysis
A color-coded representation
shows the wall thickness of
internal structures.

Automotive, aerospace, medical technology, electronics, consumer goods – each industry has its own manufacturing processes, along with different potential defects that are normally hidden from the eye. X-raying parts opens up completely new potential applications – from inspecting internal defects and the dimensional measuring of internal structures to structural material analysis.

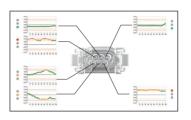


Tool & process optimizationA comprehensive inspection of the part provides meaningful information on the condition of the tools and the production process.




Development & reverse engineeringYou can easily create CAD models
from 3D volume data – significantly
accelerating product development and
reverse engineering processes.


² INSPECTION



Defect analysisYou can detect cavities, pores, cracks and other defects quickly and easily.



Assembly control
Assembled parts are checked for function and fit.




Joining technology control
In just one scan you can see whether
welded, soldered, glued or riveted
joints are really flawless.



Electronic testing
Defects quickly become visible when
electronic parts, e.g. circuit boards or
batteries, are X-rayed.


ANALYSIS



Structural analysis
A 3D structure characterization
provides important insights thanks to
high-resolution X-ray microscopy.



In-situ & 4D analysis
With in-situ and 4D analyses, the
behavior of materials under external
influences and over time can be
analyzed.



Roughness analysis Surface roughness can be analyzed for both external and internal structures.



Fiber composite analysis
Analyzing fiber composites visualizes
the 3D distribution and orientation of
different elements within a composite
material.



Analysis of grain size & distribution
Grain size and distribution are
decisive factors in determining the
hardness and strength. This is why it
is important to analyze them.

13



Image acquisition

Image evaluation

Data management & industry 4.0

Make the Invisible Visible

ZEISS X-Ray Series

The focus for ZEISS is on the customer and their application. This is why we not only offer hardware, but solutions — in fact the ones that fit your needs best. These consist of hardware systems, software, accessories, and services, precisely tailored to the respective needs. This is only possible at ZEISS.

SYSTEMS

Be it precise measurement, fast inspection or analysis

16 down to the nanometer scale, ZEISS has the right solution for your application – with high-precision CTs, automated 2D and 3D X-ray systems, and high-resolution 3D X-ray microscopes.

2D radioscopy Computed tomography X-ray microscopy

SERVICES

You can even X-ray your parts without your own X-ray system – by using the X-ray scanning service at the ZEISS Quality Excellence Centers. Reap the benefits of ZEISS X-Ray Series and see for yourself without taking any risk.

Measuring services Application support On-site trainings Classroom seminars eLearning Local maintenance offerings Guaranteed uptime Spare parts packages



Every industry and application has its challenges that need to be mastered. As a long-time expert in X-ray technology, we are familiar with your problems and can support you with our expertise and solutions.

17

Additive manufacturing Plastics
Alu casting Composites


Battery Multi-material parts

Blade Assemblies
Electronics Material research
Oil & Gas Life sciences


ACCESSORIES

We offer a number of additional options to ensure that you get the most out of your hardware solutions. With ZEISS FixAssist® CT, for example, you can reduce setup times by up to 80%. This makes you even more productive.

Sample holders
Setup table
Retrofit solutions
Automatization solutions

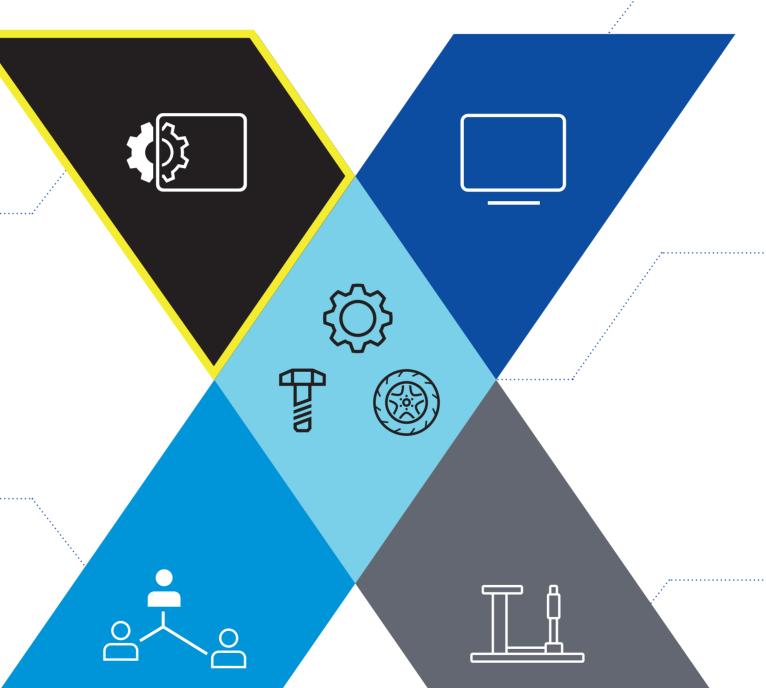

ZEISS X-ray systems at a glance

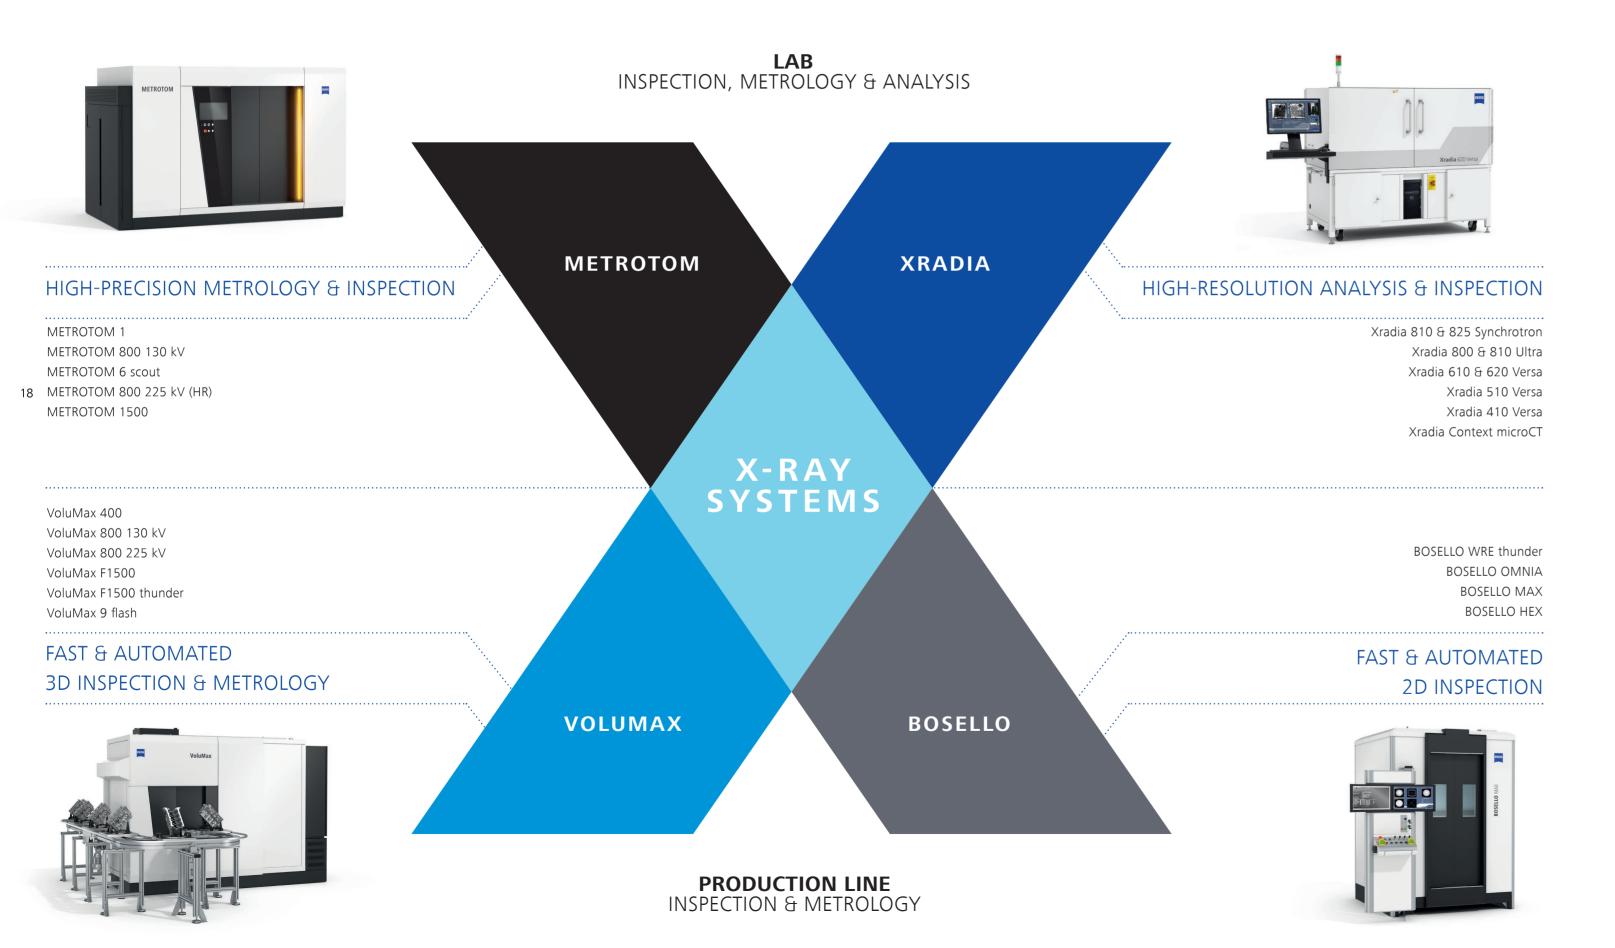

| LAB | Resolution | Accuracy | Part size | Speed | Part density |
|-----------------------------|--------------|-----------|-----------|-----------|--------------|
| High-precision metrology | , | | | | |
| & inspection | | | | | |
| METROTOM 1 | * * | * * | * * * | * * * | * * |
| METROTOM 800 130 kV | * * | * * * * * | * * * | * * * | * * |
| METROTOM 6 scout | * * * | * * * * * | * * * | * * * | * * * * |
| METROTOM 800 225 kV (HR | * * | * * * * | * * * * | * * * * | * * * * |
| METROTOM 1500 | * * * | * * * | * * * * * | * * * * | * * * * |
| High-resolution analysis | , | | | | |
| & inspection | | | | | |
| Xradia 800 & 825 Synchrotro | on * * * * * | - | * | * * | * |
| Xradia 800 & 810 Ultra | * * * * * | - | * | * | * |
| Xradia 610 & 620 Versa | * * * * | - | * * | * * | * * * |
| Xradia 510 Versa | * * * * | - | * * | * | * * * |
| Xradia 410 Versa | * * * * | - | * * | * | * * |
| Xradia Context microCT | * * * | - | * * | * * * | * * * |
| | | | | | |
| PRODUCTION LINE | | | | | |
| Fast & automated | | | | | |
| 2D inspection | | | | | |
| BOSELLO WRE thunder | * | - | * * * | * * * * * | * * * |
| BOSELLO OMNIA | * | - | * * * * * | * * * * * | * * * * |
| BOSELLO MAX | * | - | * * * * | * * * * * | * * * * |
| BOSELLO HEX | * | - | * * * | * * * * * | * * * * |
| Fast & automated | | | | · | · |
| 3D inspection & metrolog | Jy | | | | |
| VoluMax 400 | * * * | * * * * * | * * | * * * * | * * |
| VoluMax 800 130 kV | * * * | * * * * * | * * * | * * * | * * |
| VoluMax 800 225 kV | * | - | * * * * | * * * * * | * * * * |
| VoluMax F1500 | * | - | * * * * * | * * * * | * * * * |
| VoluMax F1500 thunder | * | - | * * * * | * * * * * | * * * * |
| VoluMax 9 flash | * | _ | * * * * * | * * * * * | * * * * |

20

Make the Invisible Visible ZEISS X-Ray Series

// INNOVATION MADE BY ZEISS